VER0320097380

STEREO RADIO

CRC 7380

USER MANUAL

CREATE MORE XITEMENT

Imprint

All rights reserved. Any reproduction without consent of cmx® is prohibited.

cmx® reserves the right to modifications of the device.

Designed by cmx® in Europe | Assembled in China

TM©2009 cmx electronics

CONTEXTS

1. GENERAL ..... - 1 -

1.1. Safety precautions ..... *- 1 -*
1.2. Disposal of Waste Electronic Equipment ..... *- 1 -*
1.3. Battery Disposal ..... *- 2 -*
1.4. Copyright ..... *- 2 -*
1.5. Hearing Protection ..... *- 2 -*
1.6. Cleaning and Maintenance ..... *- 3 -*

2. FEATURES ..... - 4 -

3. LOCATION OF CONTROLS ..... - 5 -

3.1. Main unit ..... *- 5 -*

4. PREPARATION ..... - 7 -

4.1. Connection with cable ..... *- 7 -*
4.2. Operation with batteries ..... *- 7 -*

5. CD-PLAYER ..... - 7 -

5.1. Insert CD / MP3-CD ..... *- 7 -*
5.2. CD / MP3-CD playback ..... *- 8 -*
5.3. Program CD/ MP3 tracks ..... *- 9 -*

6. RADIO ..... - 9 -

6.1. Listen to radio ..... *- 9 -*

7. EXTERNAL COMPONENTS ..... - 10 -

7.1. Connect earphones ..... *- 10 -*
7.2. USB 2.0 ..... *- 10 -*
7.3. SD and MMC card reader ..... *- 11 -*

8. TROUBLESHOOTING ..... - 11 -

9. WARRANTY ..... - 12 -

9.1. Warranty Procedure ..... *- 13 -*
9.2. Warranty has expired ..... *- 14 -*
9.3. Shipping the Unit ..... *- 14 -*

10. IN THE BOX ..... - 15 -

11. TECHNICAL SPECIFICATIONS ..... - 16 -

1. General

1.1. Safety precautions

- ⚠ Only connect to mains power supply (230 Volt/50 Hz).
- ⚠ Do not place the device in close proximity of water (e.g. sink, wash basin, etc.). The device can fall into the water and cause a short circuit.
- ⚠ The device consumes some power during standby operation. For zero power consumption disconnect from mains power supply.
- ⚠ Place the device on a stable surface to prevent it from tipping over and causing damages or injuries.
- ⚠ Condensation can form if the device is placed in cold surroundings. Leave the device for at least one hour in standby mode.
- ⚠ Do not subject the device to direct sunlight or high temperatures, this can result in fire.

1.2. Disposal of Waste Electronic Equipment

Your product is manufactured from high quality raw materials and should be recycled.

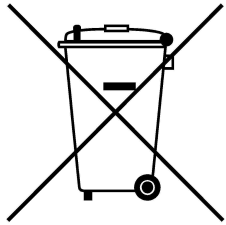

Ask your municipality for collecting points for waste electronic equipment.

Do not dispose of old appliances with the household waste.

The symbol on the product, the instructions for use or the packing will advert about the methods for disposal.

1.3. Battery Disposal

The law requires returning exhausted batteries to public collection points or to the dealer.

Do not dispose of exhausted batteries with the household waste.

1.4. Copyright

It is illegal to copy, send, exhibit, broadcast via cable, publicly show or rent copyrighted materials without consent.

1.5. Hearing Protection

- Select a moderate volume to protect your hearing.
- Only turn the volume to a level where you can still hear ambient noise.

1.6. Cleaning and Maintenance

⚠ Before cleaning disconnect from mains power supply.

Cleaning the Casing

Clean the casing with a dry cloth.

Cleaning CDs

Clean CDs with a soft cloth from the center to the edge.

⚠ Do not use pointed or sharp utensils for cleaning, this will damage the CD.

Cleaning the Laser

Dust or dirt can collect on the laser pick-up. Only use a commercially available special cleaner.

⚠ Do not clean with liquid cleaning agents or a wet cloth, this can cause a short circuit.

2. Features

This stereo radio can play all Audio CDs and MP3 CDs.

Music playback is also possible via USB port and SD card reader.

You can operate the stereo radio with a power cable or batteries.

⚠ Batteries not included in delivery.

3. Location of controls

3.1. Main unit

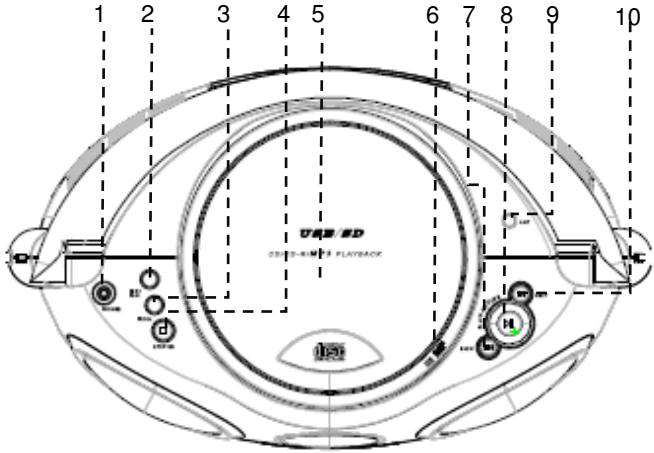

1	PHONES	Earphones/headphones jack
2	REP./RAN.	Select playback mode
3	PROG.	Program mode
4	STOP/SD	Stop playback SD: select playback from SD card USB: select playback from MP3 player / USB stick
5	CD drive	CD drive
6	CLOSE/OPEN	Open CD drive
7	BACK (⏮)	Start and pause playback
8	PLAY/PAUSE/USB	Start and pause playback USB: select playback from MP3 player / USB stick
9	FM ANT	Radio antenna
10	NEXT (⏭)	Fast forward / next track

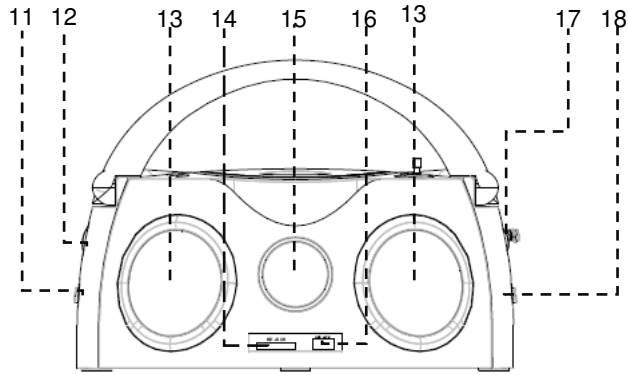

11	FUNCTION	Function selector RADIO, OFF, MP3/CD
12	-VOLUME+	Decrease volume Increase volume
13	Speaker	speaker (left & right)
14	SD JACK	SD or MMC card slot
15	LCD	Display
16	USB JACK	Port for MP3 player / USB stick
17	Tuning	Select radio function
18	AM/FM/FM ST.	Switch to AM/FM/FM ST.

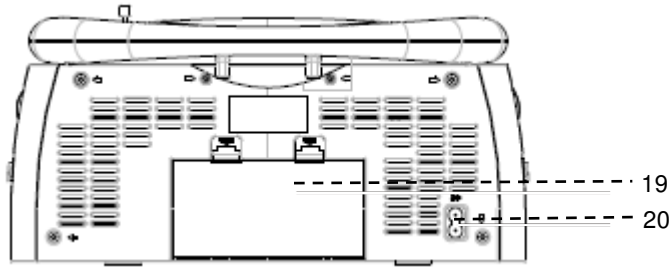

19	Battery compartment	8 pieces (1,5V, UM-2/C/LR14)
20	AC	230 Volt

4. Preparation

4.1. Connection with cable

Follow this step to connect the system:

1. Connect the mains power cable first to the system and then to a wall outlet.

4.2. Operation with batteries

1. Open the battery door and insert 8 batteries (1,5V, UM-2/C/LR14).

   ⚠ Please observe correct battery polarities.

   ⚠ When the set is not used or is only used with “AC”, please remove the batteries, to avoid damage to set from leakage of batteries.

5. CD-Player

5.1. Insert CD / MP3-CD

1. Press CLOSE/OPEN and the CD drive is extended vertically.

2. Insert a CD with the label up and carefully press it down onto the ball bearing spindle.
3. Close the CD drive manually.

5.2. CD / MP3-CD playback

1. Set the function switch to MP3/CD.
2. Press PLAY/PAUSE/USB key and the disk will start spinning and than playing the first song (track).

This system can play CDs / MP3 CDs in different playback modes.

1. Press REP./RAN.

Settings	Playback
Repeat (press once)	Repeat current track.
Repeat All (press twice)	Repeat all tracks on the CD.
Repeat Album (press triply)	All tracks of the current album are repeated.
Random or Shuffle (press four times)	Repeat all tracks on the CD in random order.

5.3. Program CD/ MP3 tracks

You can program your own playlist with up to 99 tracks.

1. During CD / MP3-CD playback press the STOP button before programming.
2. Press the PROG. button until P01 is displayed.
3. Press NEXT(⏭) or BACK(⏮) until the desired track is displayed.
4. Press the PROG. button to confirm.
5. Repeat step 3 and 4 to program further tracks.
6. Press the PLAY/PAUSE/USB button to start playback.

6. Radio

6.1. Listen to radio

1. Set the function switch to RADIO.
2. Select AM, FM or FM Stereo.
3. Turn the tuning knob to tune into your favourite radio station.

⚠ For best reception point the antenna in a different direction or choose a different location.

7. External components

7.1. Connect earphones

1. Connect you earphones or headphones.

   The speakers are muted if earphones are connected.

⚠ To avoid hearing problems do not use earphones or headphones for an extended period of time.

⚠ Increased sound pressure from earphones or headphones can cause hearing loss.

7.2. USB 2.0

Extend your system by connection your MP3 player or USB stick.

⚠ Do not disconnect the device when „USB“ mode is selected.

1. Connect your MP3 player or USB stick.
2. Set the function switch to MP3/CD.
3. Press the STOP/SD or PLAY/PAUSE/USB button until “USB” is displayed.
4. Press the PLAY/PAUSE/USB button to start playback.

⚠ To avoid damage only disconnect the device after pressing the STOP button and selecting a different mode with the function selector.

7.3. SD and MMC card reader

Extend your system by inserting a SD or MMC memory card in the card reader.

⚠ Do not disconnect the device when „SD“ mode is selected.

1. Insert the SD or MMC card in the card reader.
2. Set the function switch to MP3/CD.
3. Press the STOP/SD button until “SD” is displayed.
4. Press the PLAY button to start playback.

⚠ To avoid damage only disconnect the device after pressing the STOP button and selecting a different mode with the function selector.

8. Troubleshooting

Contact the service hotline or use the contact form on the homepage in case of problems with the system that are not dealt with here.

Malfunction	Solution
„No disc“	▪ Insert a CD. ▪ Insert a finalized CD-RW or CD-R. ▪ Insert a CD with the label up.

	▪ Try another CD or clean the CD.
Bad reception	▪ Increase the distance to TV set or DVD player. ▪ Point the antenna in a different direction.
System does not respond.	▪ Disconnect from mains power supply and reconnect after a few seconds.
No sound	▪ Increase the volume. ▪ Disconnect the earphones.
No CD playback	▪ Check your CD for damages or scratches. ▪ Insert the CD with the label up.
USB stick / SD memory card does not work	▪ Use a different USB stick or SD card to check the function.

9. Warranty

This system comes with a 24-month warranty from the date of purchase.

Please keep your purchase documents!

In case of manufacturing or material defects the warranty consists of rectification of defects or exchange.

The warranty does not include damages or troubles in case of

- malfunctions due to improper use
- wear and tear
- repairs by third parties

The warranty does not include

- display damage
- accidental damage

Repair does not extend the warranty period.

9.1. Warranty Procedure

In case of malfunctions, please contact:

- Your dealer
- Service hotline
    - Austria: +43 0720 502671 – please dial with the zero!
    - Germany: +49 (0)180 166 66 264 621
    - Switzerland: +41 (0) 848 00 3322
- Contact form – www.cmx-electronics.com

9.2. Warranty has expired

Please contact us by phone or contact form in case your warranty has expired. We will help you!

Please inform us about the following:

- Unit type
- Purchase date
- Malfunction

9.3. Shipping the Unit

To ensure a quick response, please observe the following in case you send us the unit:

- Send unit plus accessories
- Send postage free to service center
- Attach purchase documents
- Attach filled-out warranty card
- Error description

Example for error description

Wrong	**Correct**
Unit is defective	Unit does not respond

Unit malfunctions	Unit cannot be switched on

- Sender information: Name, address, ZIP code, city and phone number and e-mail address

10. In the box

Please contact your dealer directly in case one of the accessories is missing or damaged.

Images are representative picture for reference only!

Power cable

Warranty card

User manual

11. Technical specifications

CD-Player	
Formats	Audio CD / Audio CD-R / Audio CD-RW MP3-CD / MP3-CD-R / MP3-CD-RW
Radio	
Frequency bands	AM / FM / FM Stereo
frequencies	AM 520 – 1620 kHz FM 87,5 – 108 MHz
Connectors	
Input	USB 2.0 – 1.1 compatibel
Outputs	3,5 mm headphones
Card reader	SD cards MMC cards
Speakers	
Power output	Max. 80 Watt PMPO
General	
Power consumption	13,2 Watts
Mains power	AC 230 V ~ 50 Hz
dimensions	325 x 165 x 200 mm

CREATE MORE XITEMENT

www.cmx-electronics.com